


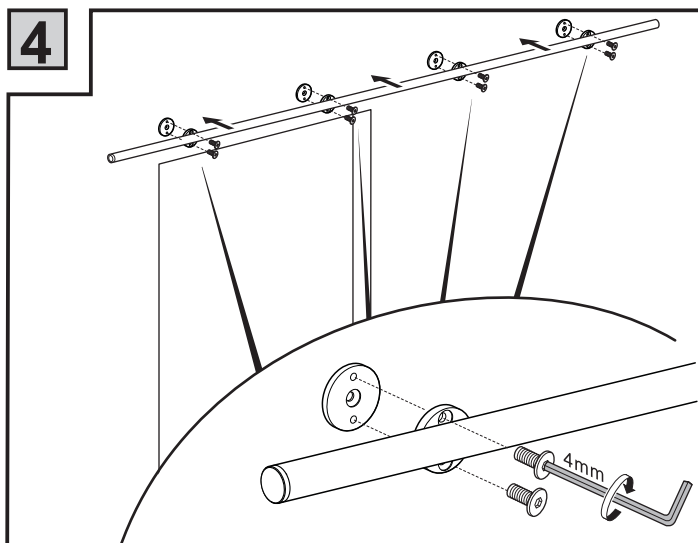
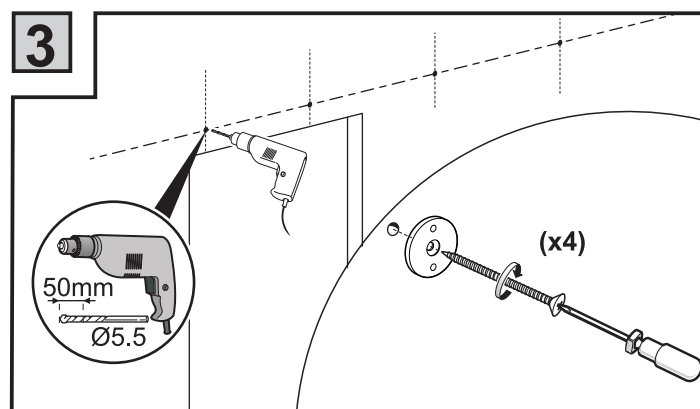
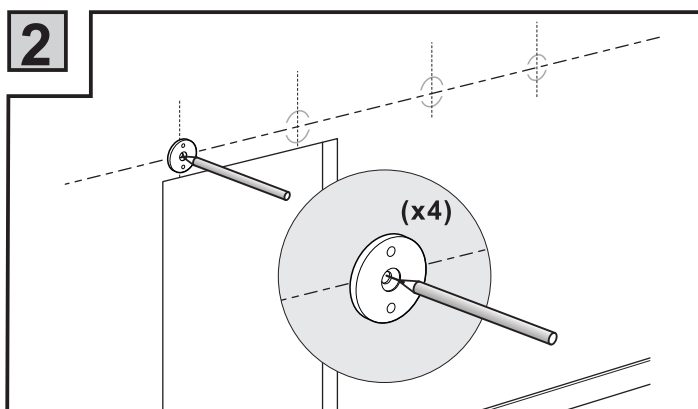
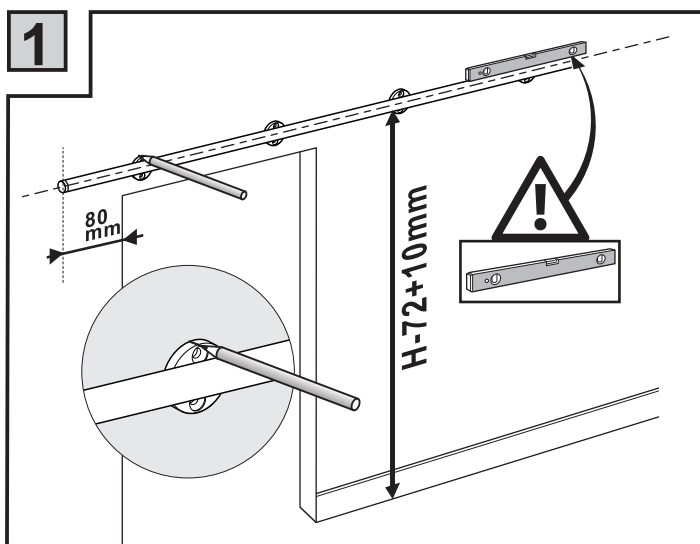
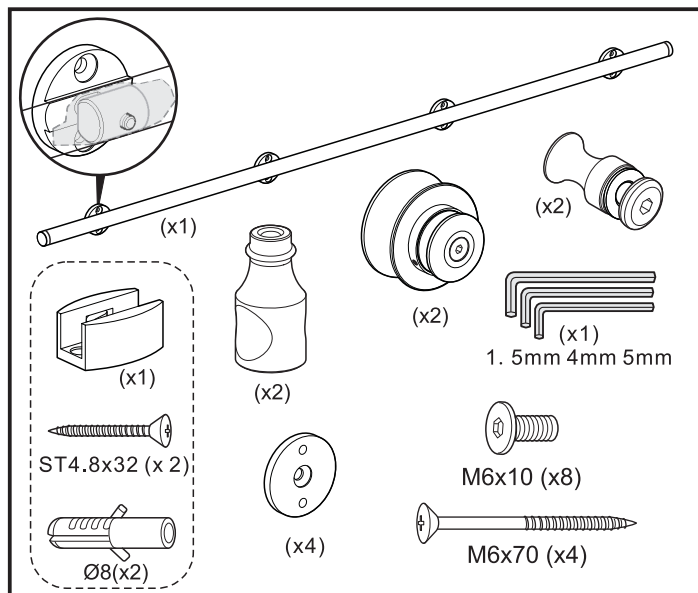
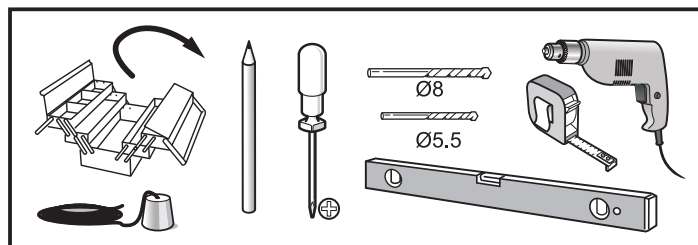
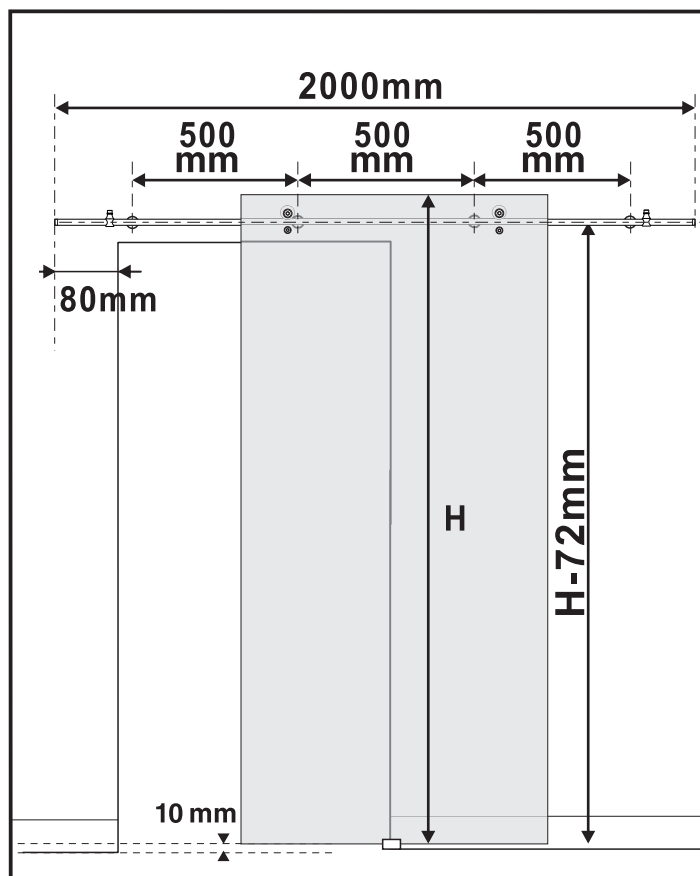


Installation manual



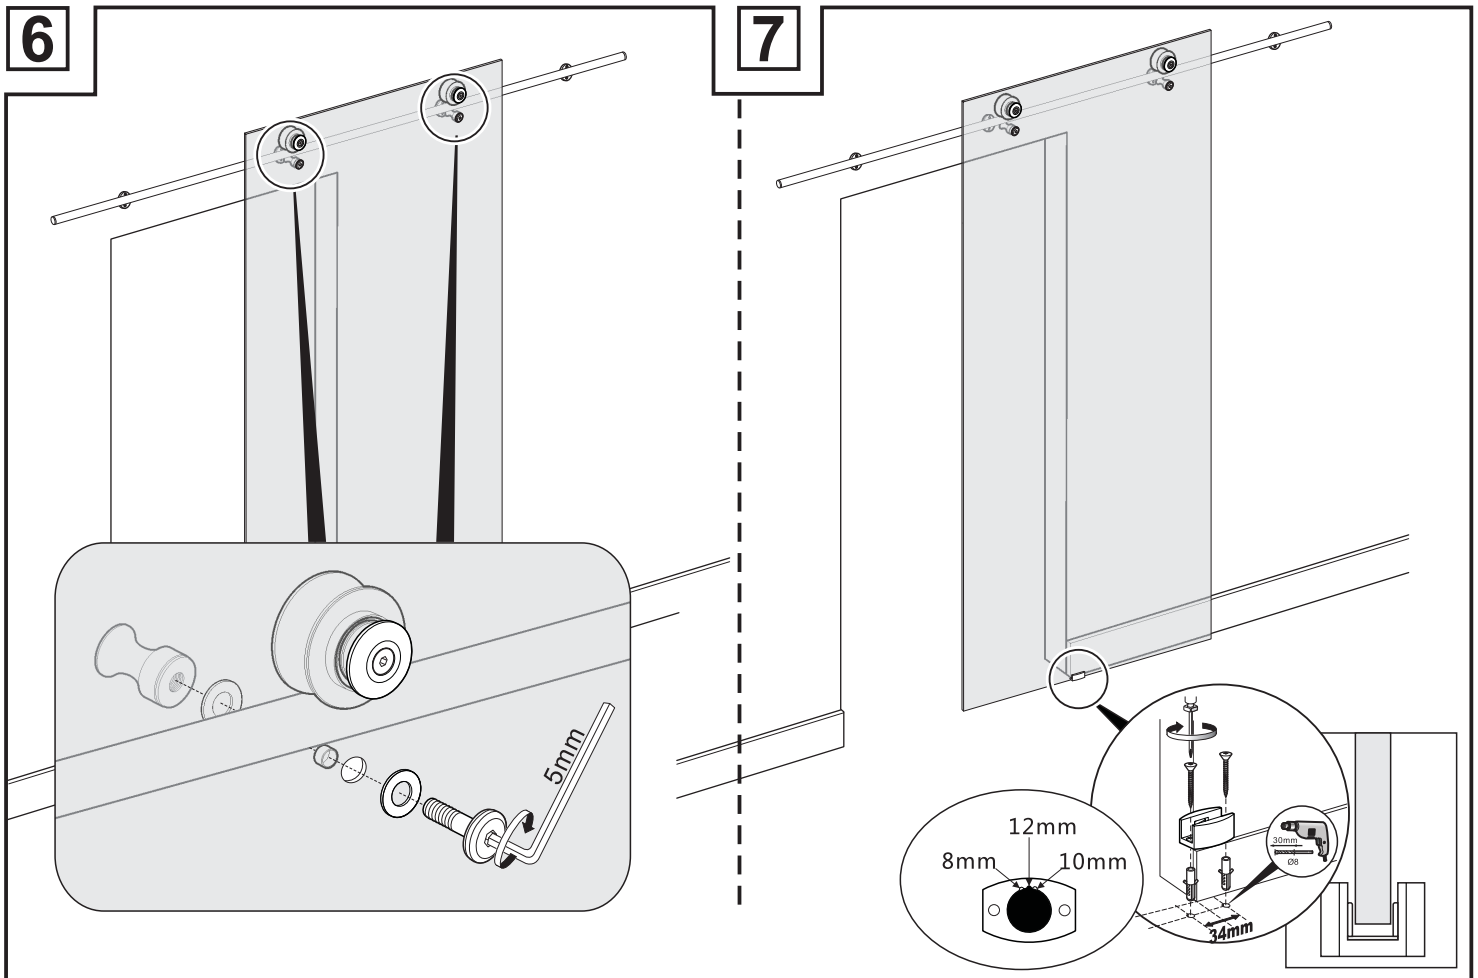


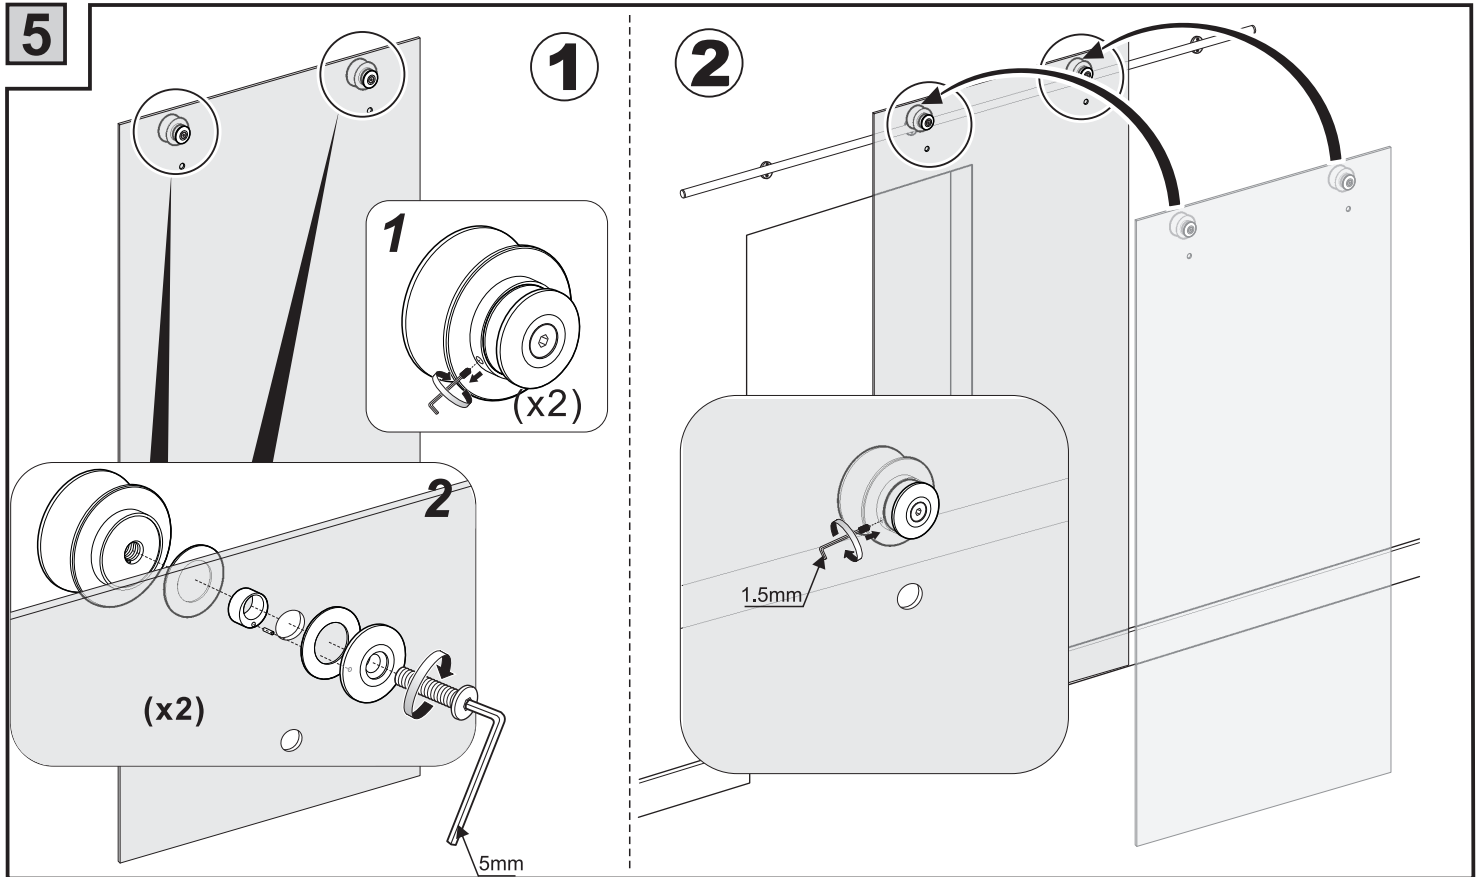





8

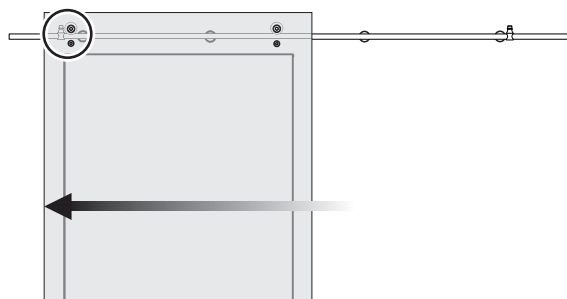


when stoper inside of the spacer

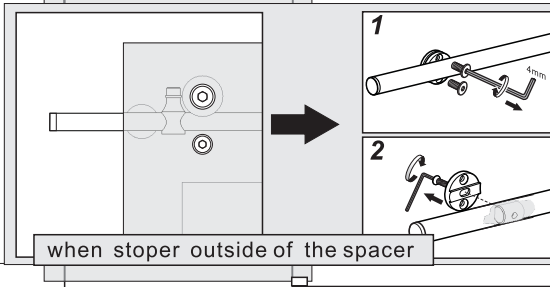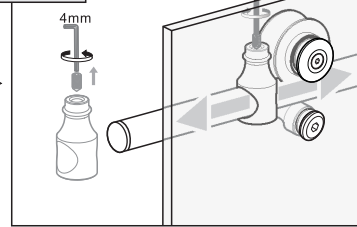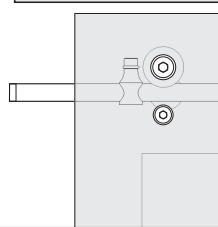




when stoper outside of the spacer

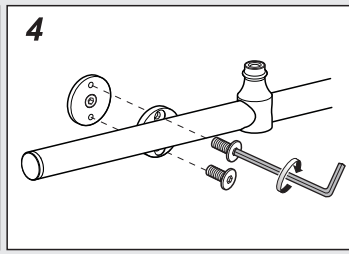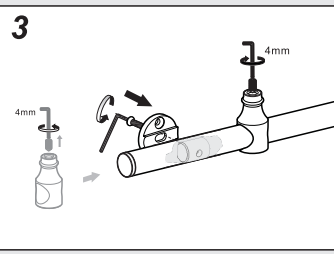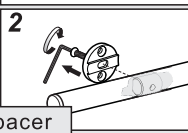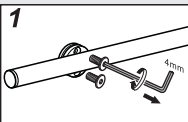





9

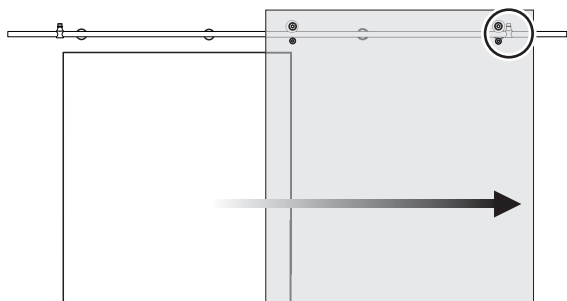

when stoper inside of the spacer

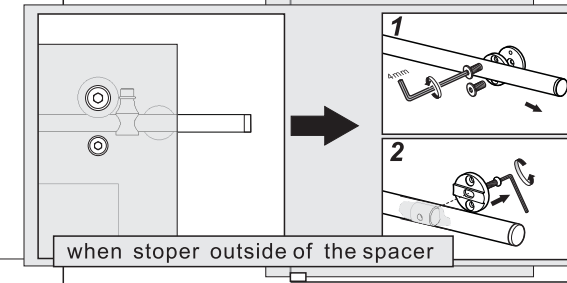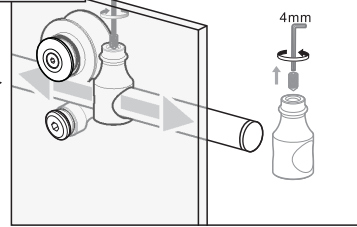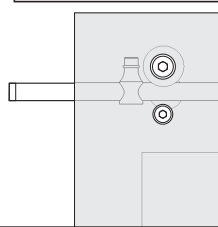

when stoper outside of the spacer

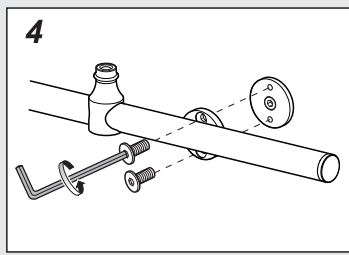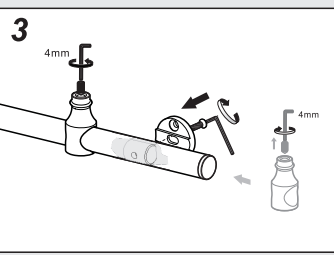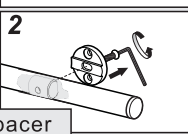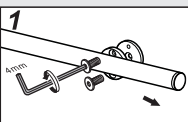

10

