



Installation Instructions for Glass Door System

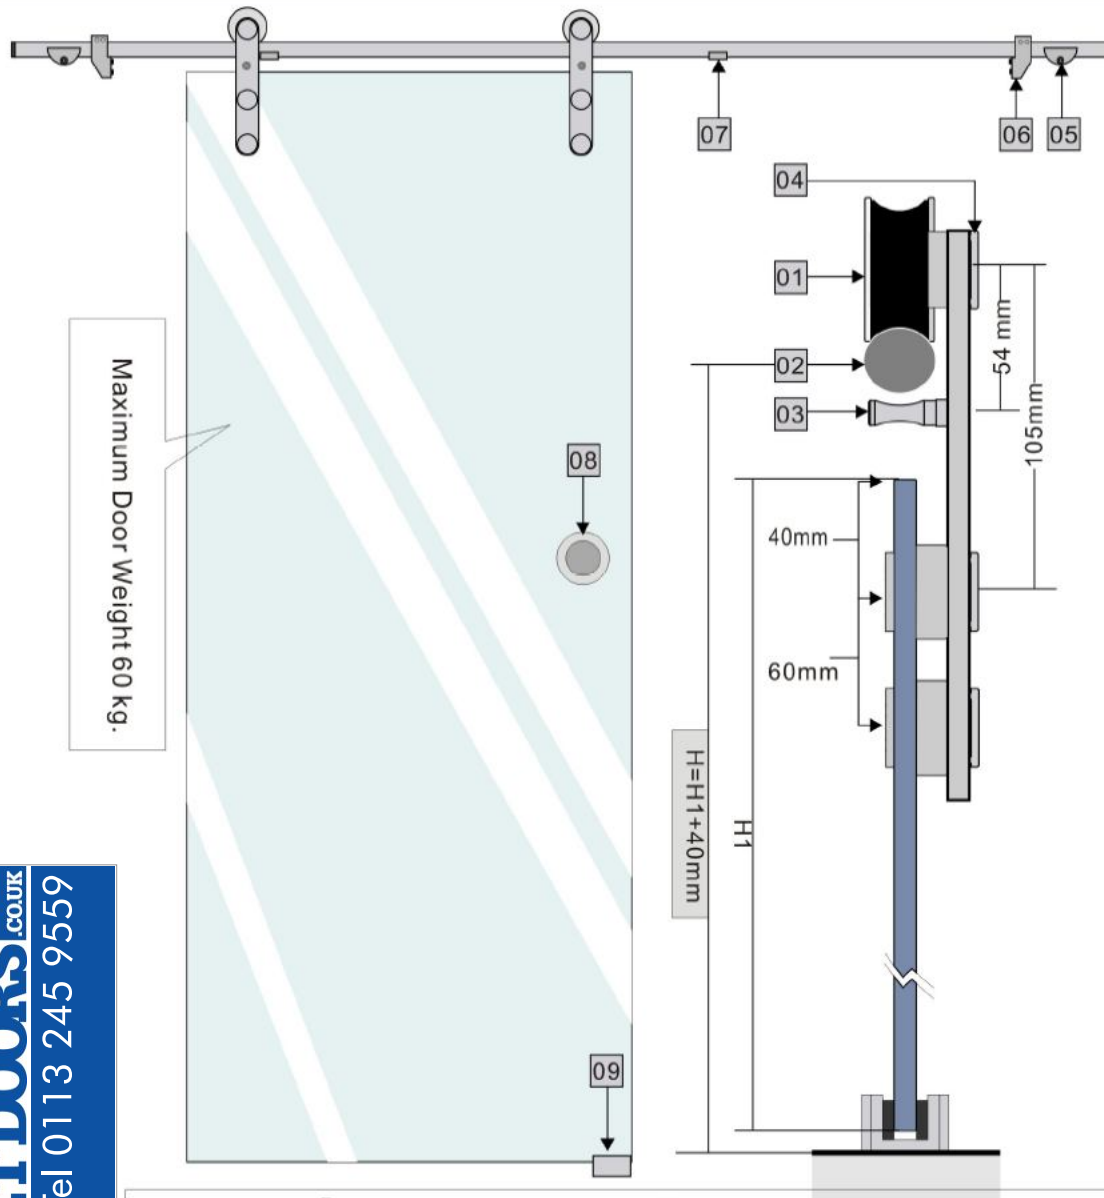

- 01** Roller Assembly (2pcs)
- 02** Rail (1pc)
- 03** Anti-Jump Device (2pcs)
- 04** Covers (6pcs)
- 05** Rail End Clamps (2pcs)
- 06** End Stops (2pcs)
- 07** Rail Supports (2pcs)
- 08** Glass Oblong Handle supplied NOT round
- 09** Floor Guide (1pc)


Tool Supplied

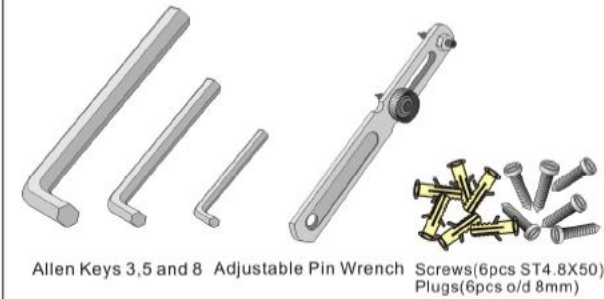

Tool Required







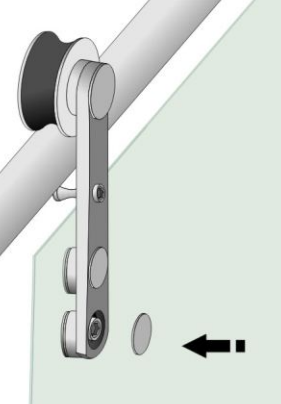



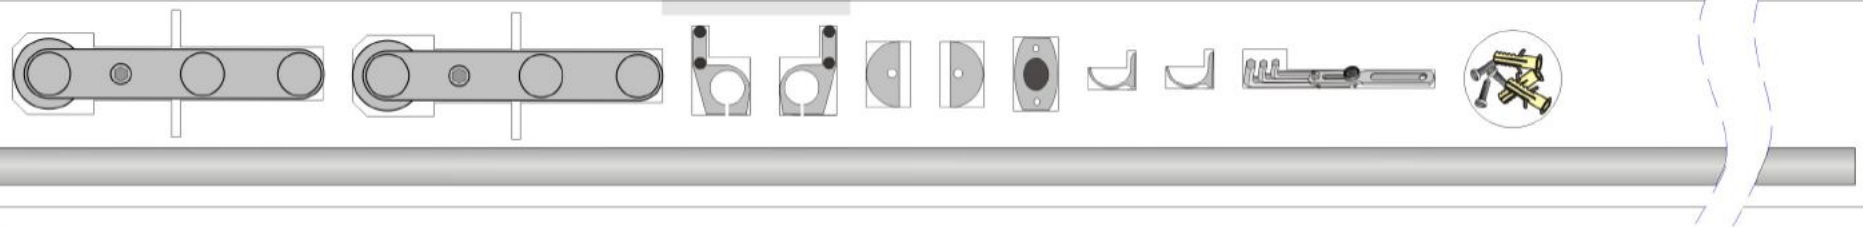


You need to ensure the floor guide is adjusted correctly for 8mm glass, if you need to adjust, push the plastic part partially out of the metal and turn until in the correct position marked 8mm.

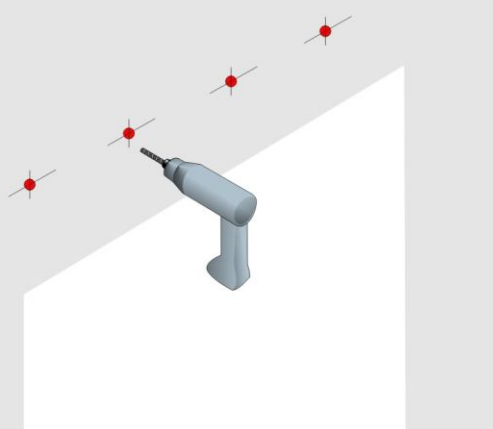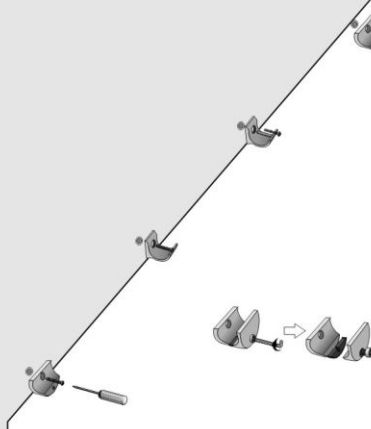

Installation Instructions for Glass Door System

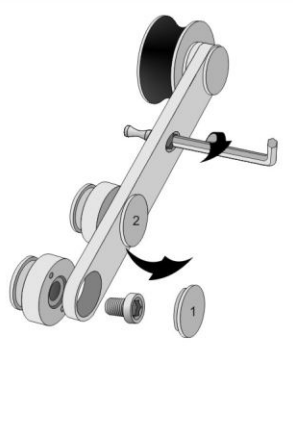IMPORTANT, THIS SYSTEM SHOULD BE ATTACHED TO A SOLID WALL USING APPROPRIATE FIXINGS OR A SUITABLY REINFORCED STUD WALL.

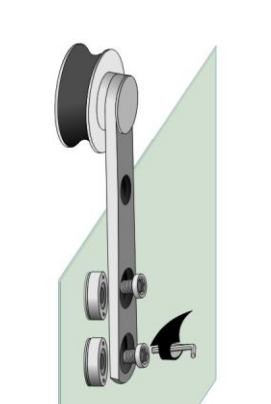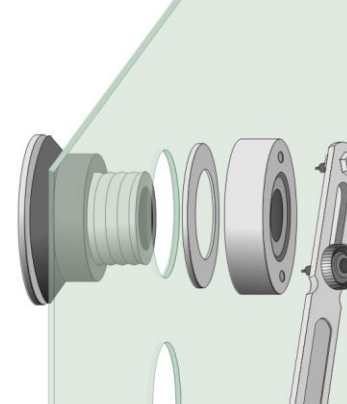					
<p>1 Calculate the height required for the wall holes (see page 1) and use an 8mm drill 60mm deep at 4 equal intervals.</p> <p>Bear in mind the Rail End Clamps hole needs to be positioned at least 50mm from the end of the Rail. It is absolutely imperative that these holes are at the exact same height so check carefully before drilling.</p>	<p>2 Using the screws and rawlplugs provided screw the Rail End Clamps (you need to separate the two halves) and Rail Supports into position on the wall.</p>	<p>3 Slide the End Stops onto the Rail making sure they are on the correct way and place the Rail onto the Clamps and supports in the desired position. Screw the cover part of the Rail Clamp back onto the unit securely and check the Rails is fixed and solid.</p>	<p>4 Fix the Door Guide to the finished floor. It should be positioned just before the beginning of the passage opening approx. middle of the door movement (see page one). The distance from the wall to the centers of the fixing holes should be 10mm assuming a flush wall.</p>	<p>5 Using the 8 allen key remove the Anti-Jump Device and unscrew the caps of the lower two assemblies releasing the 8mm allen screw.</p>	
					
<p>11 The final installation.</p>	<p>10 Screw covers back on.</p>	<p>9 Install the Anti-Jump Device with the allen key and fix firmly.</p>	<p>8 It is a two person job to then hang the glass on the Rail, be careful with the glass especially the corners ensuring they don't catch anything hard. It is always advisable to put some cardboard/carpet underneath the working area.</p>	<p>7 Rejoin the main body of the Rail Assemblies and fix firmly into position using the screws and allen key. Note there is an amount of adjustment available so ensure the glass is not stressed.</p>	<p>6 Using the adjustable pin wrench unscrew the assemblies as shown and install in the glass ensuring the pin wrench tightens the assembly correctly.</p>

*Please note you are responsible for the correct installation of this unit so please ensure you pay particular attention to these instructions AND those that are supplied with the glass door.